

Cylinder Holder... safe and secure

The BOC cylinder holder has been designed for the individual safe storage of CD or E size cylinders. It allows simple one handed loading and quick release.

BOC has a flexible range of options designed with the entire range of cylinder sizes in mind. For the storage of large numbers of small cylinders in main stores, or the storage of medium to large cylinders please ask for information on BOC cylinder racking and stalls which provide an efficient solution to storing cylinders safely and securely in main storage areas.

BOC can also provide the appropriate safety signage, provide a store design service, and arrange installation in many areas.

Features and Benefits

- Securely holds cylinder in place
- Keeps cylinders clear of the floor allowing easy cleaning
- Easy, one handed cylinder loading
- Spring loaded paddles allow quick release
- Fixes permanently to the wall
- Can be set up for small (CD size) cylinders or taller (E size) cylinders
- Moulded base for flat and round based cylinders
- Allows permanent designation of appropriate cylinder storage area
- Allows the control of cylinder numbers stored within an area
- Full and empty cylinder areas can be clearly and permanently identified
- Full and empty labels for holder included
- Reduce blockages and hazards in doorways



Specifications

	CD setup	E setup
Recommended height from floor to base of holder:	200mm	200mm
Minimum centre to centre distance between mounted holders:	185mm	185mm

Note: Pack includes- all components for setting up as CD or E size holder, strap, strap screws, 'Full/Empty' labels (wall fixings are not included).

Note: CD setup will also support DD, ZD, ED, D and PD cylinder sizes.

Important notes:

- Wall fixings are not included
- 4 fixings required per holder in CD setup
- 5 fixings required per holder in E setup
- Holes for fixings are 6.4mm diameter
- Fixings should be chosen that are appropriate for the wall surface being used
- The holder is designed for permanent fixing
- It is important to fix the base an appropriate distance from the floor for easy loading and unloading
- It is important to leave sufficient space to the side of the holder to allow paddles to open
- Components included in pack for setting up as larger 'E size' holder
- 3 springs included and recommended
- Spring(s) can be removed prior to installation for softer hold if desired
- Instructions/guide sheets for fixing included
- Moulded from nylon

Correct signs that comply with the requirements specified in HTM 02-01 should always be displayed in cylinder storage areas. BOC is able to provide signs to ensure your site is compliant with the latest legislation and best practice guidelines.


To find out more or place your order today contact:
08456 447 764 or for
24 hour support visit:
www.bochealthcare.co.uk

Cylinder Holder... safe and secure

Cylinder Holder

Order Code	Description
706-0001	CD/E Cylinder Holder

E setup

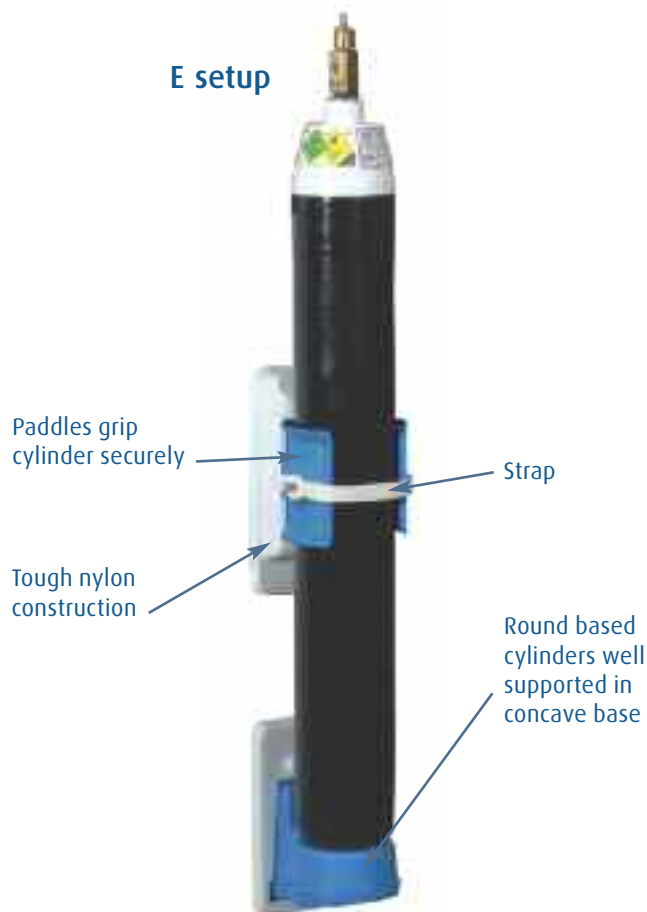


Loading



Unloading



CD setup

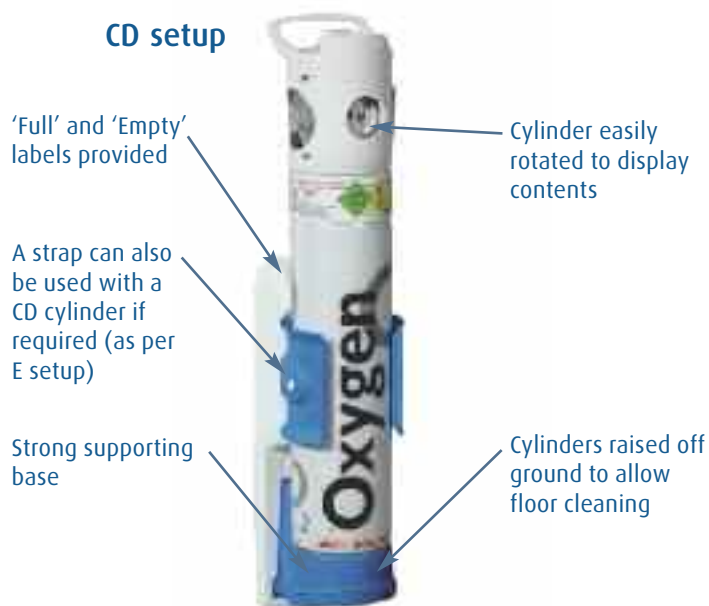

To find out more or place your order today contact:

08456 447 764

or for 24 hour support visit:

www.bochealthcare.co.uk

BOC Healthcare

Great Britain & N. Ireland
Customer Service Centre,
Priestley Road, Worsley,
Manchester, M28 2UT
Tel: 08456 447 764 Fax: 0845 087 0062
Email: bochealthcare-uk@boc.com
www.bochealthcare.co.uk

BOC Gases Ireland

Republic of Ireland
PO Box 201, Blubell,
Dublin 12
Tel: 01 409 1827 Fax: 01 409 1854
Email: sales@bocgases.ie
www.bocgases.ie

The stripe symbol and the letters BOC are registered trade marks of The BOC Group Limited. Both BOC Limited and The BOC Group Limited are members of The Linde Group, the parent company of which is Linde AG. Reproduction without permission is strictly prohibited. © Copyright 2009