

Cylinder stalls

Safe and strong

The BOC cylinder stalls are ideal for the storage of medium to large cylinders. For the storage of small cylinders please ask for information on cylinder racking which provides an efficient system to store round bottomed and smaller cylinders, safely and securely.

The BOC range of cylinder storage items help you safely manage and secure your cylinders. A flexible range of items designed with the entire range of cylinder sizes in mind, it allows you to make the best use of your available space to help with easier and safer handling, stock rotation, and stock checking.

BOC can also provide the appropriate safety signage, provide a store design service, and arrange installation in many areas.

Features and benefits

- Powder coated steel construction
- 'Arms' sold individually or in kits
- Long and short options available
- Bay sizes can be installed to specific width requirements.
- Choice of two chain fixing heights for larger or medium cylinders.
- 5 x chain fixings positioned along the lengths of the bars.
- Secure fixing plates to floor and rear.
- Wall fixing plates allow choice of securing holes.
- Bracing kit available for freestanding stall.
- Arms can be cut to a desired length - additional pack of 3 fixings (704-0003 required for each arm.

BOC can provide a professional design and installation service. This includes a site visit to fully assess the area, detailed measurements are undertaken, and a comprehensive design is provided with appropriate signage indicated according to current legislation. Complete installation can be provided in many areas.



Specifications









	Height	Depth
Long 'arm'	950 mm	1100 mm
Short 'arm'	950 mm	465 mm
Freestanding kit forms an internal stall width of 970 mm		

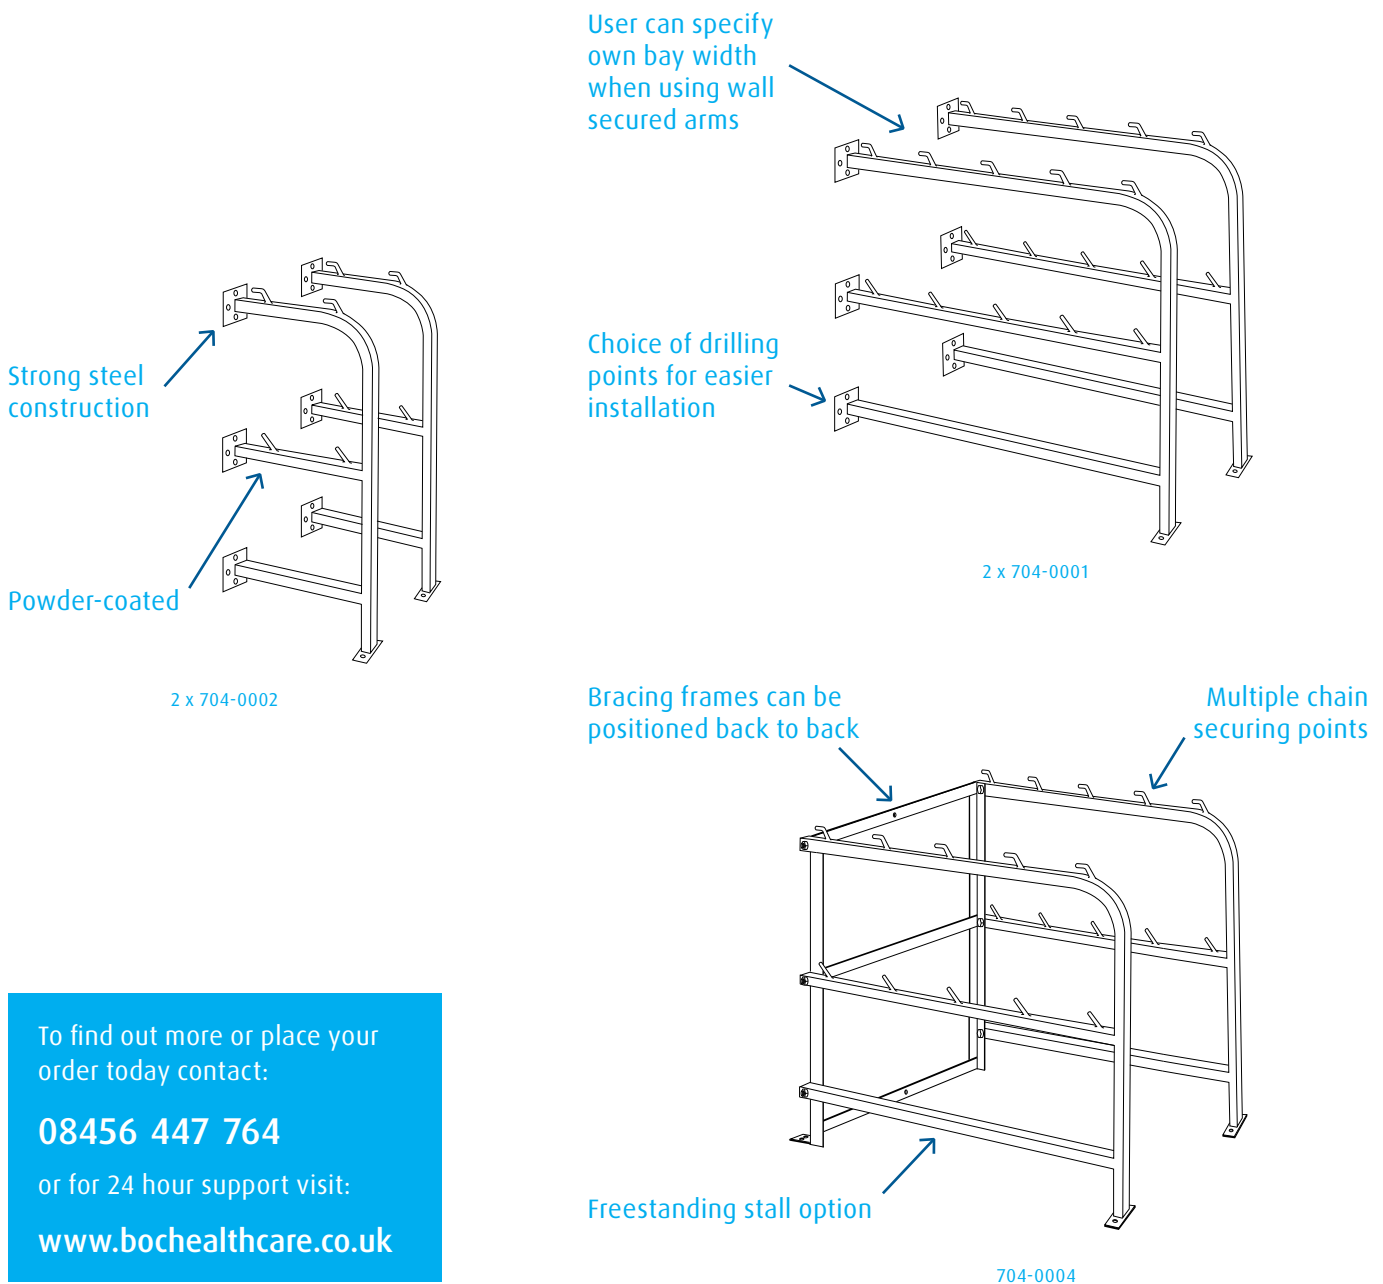
Please note: all 'arms' are sold individually or as specified.

Important notes

- Arms sold individually or as specified in kits.
- Wall and floor fixings are not provided.
- All holes are 12mm.
- M10 fixings should be selected.
- Fixings selected should be appropriate for the substrate.
- 8 fixings required per arm.
- Chain available separately.
- Product codes specified overleaf.
- Images are shown for illustration and product may vary as improvements are made.
- Constructed from 40mm box steel

Cylinder stalls

Order code	Description	
704-0001	Stall arm long standard (single)	
704-0002	Stall arm short standard (single)	
704-0003	Stall arm wall fixings - optional (pack of 3) (required if item 704-0001 is cut to shorten)	
704-0004	Stall freestanding kit long arm (forms 1 stall)	
704-0005	Stall freestanding kit extension stall long (forms extra 1 stall)	
704-0006	Stall freestanding kit short arm (forms 1 stall)	
704-0007	Stall freestanding kit extension stall short (forms extra 1 stall)	
704-0010	Chain for storage stalls (per m)	



To find out more or place your order today contact:

08456 447 764

or for 24 hour support visit:

www.bochealthcare.co.uk

BOC Healthcare, Great Britain & N. Ireland
Customer Service Centre, Priestley Road,
Worsley, Manchester M28 2UT, United Kingdom
Tel 08456 447 764, Fax 0845 087 0062
bochealthcare-uk@boc.com, www.bochealthcare.co.uk

BOC Healthcare, Republic of Ireland
PO Box 201, Bluebell, Dublin 12, Republic of Ireland
Tel 01 409 1827, Fax 01 409 1854
healthcareinfo.ie@boc.com, www.BOCOnline.ie