

Stackable cylinder racking

Safe and strong

BOC Healthcare's stackable cylinder racks are ideal for the storage of round-bottomed and smaller cylinders.

The flexible range allows you to make the best use of your available space. Simply stack the number of shelves required – up to a maximum of 10 high, with a roof frame on top, for storage of between 5 to 50 cylinders.

Simply use as many, or as few, shelves as you need.

The BOC stackable cylinder racks help you safely secure your cylinders, allow for safer handling, and help cylinder management with easier and simpler stock rotation and stock checking.

BOC can also provide the appropriate safety signage, provide a store design service, and arrange installation in many areas.



Stack comprising three shelf layers and a roof frame

Features and benefits

- Steel construction
- Plastic moulded trays
- Solid metal sheet roof frame
- 5 cylinders wide per shelf layer
- Create the amount of storage you need by stacking the shelf layers up to 10 high
- Stores up to 50 cylinders in one "stack"
- Shelf layers can easily be added or removed
- Individual layers means no doorway restrictions during installation

Suitable for the following BOC cylinder types:



To find out more or place your order today contact:

08456 447 764

or for 24 hour support visit:

www.bochealthcare.co.uk

Specifications

	Height	Width	Depth
Shelf layer	170mm (incl 10mm interconnecting pieces)	630mm	740mm
Roof frame	160mm	630mm	740mm

Each shelf is supplied with 4 interconnecting pieces allowing the stacking of an additional shelf or roof.




Important notes

- The maximum size of shelf stack is 10 shelf layers and 1 roof frame (1860mm high)
- When stacking 5 or more shelf layers high it is recommended to use the chain and hook to affix to structural wall for stability. This is supplied free of charge with orders of 5 or more shelf layers
- When stacking 5 or more shelf layers high it is not recommended that E size cylinders are lifted above shelf 5
- Designed for cylinders with approximate diameter of 100mm
- Images are shown for illustration and product may vary as improvements are made

BOC can provide a professional design service with appropriate signage indicated according to current legislation. Complete installation can be provided in many areas.

Stackable racking

Product code	Description
19321341	Stackable shelf layer (including 4 interconnecting pieces)
19320963	Stackable roof frame
19321342	Chain and hook for attaching to wall

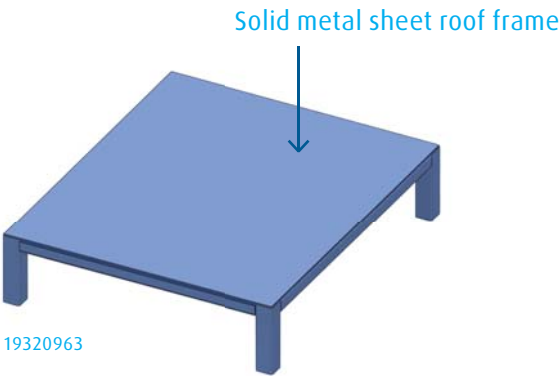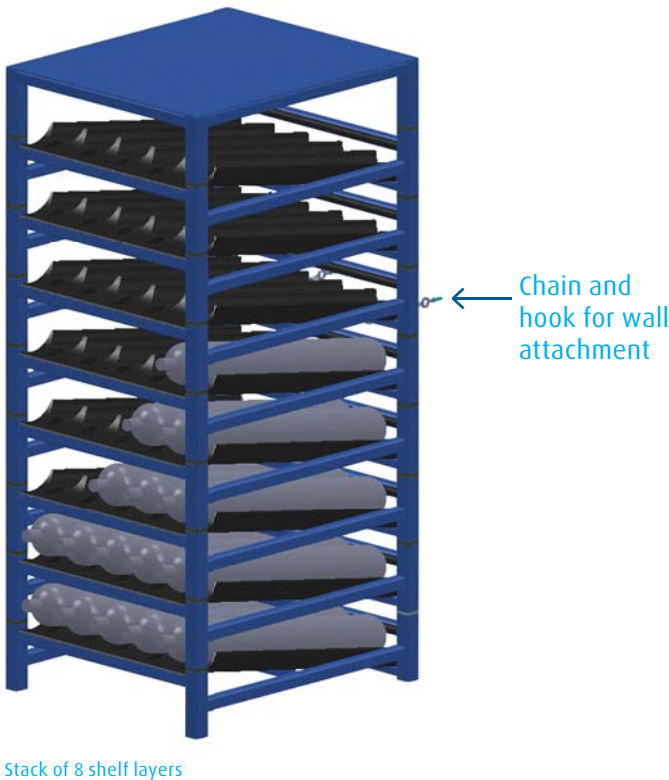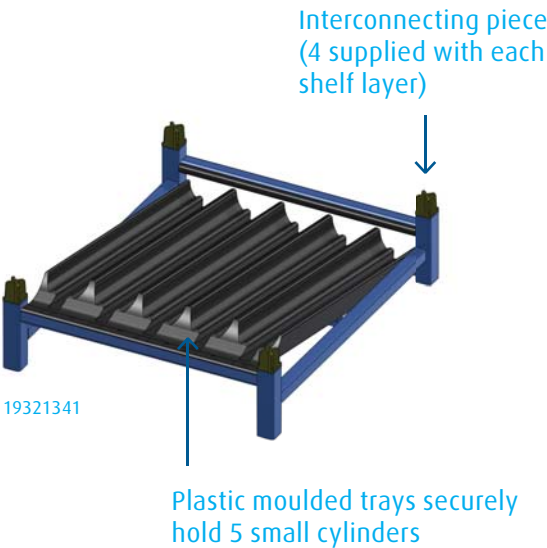

To find out more or place your order today contact:

08456 447 764

or for 24 hour support visit:

www.bochealthcare.co.uk

BOC Healthcare, Great Britain & N. Ireland
Customer Service Centre, Priestley Road,
Worsley, Manchester M28 2UT, United Kingdom
Tel 08456 447 764, Fax 0845 087 0062
bochealthcare-uk@boc.com, www.bochealthcare.co.uk

BOC Healthcare, Republic of Ireland
PO Box 201, Bluebell, Dublin 12, Republic of Ireland
Tel 01 409 1827, Fax 01 409 1854
healthcareinfo.ie@boc.com, www.BOConline.ie